# **Installation Guide**

# **Ethernet Gateway**







E&OE. iLight reserve the right to make changes to the equipment without prior notice. © Signify Holding

Doc No: 9850-000916--01

iLight

Usk House, Lakeside Llantarnam Park, Cwmbran.

t: +44 (0)1923 495495 e: enquiries@iLight.co.uk

NP44 3HD, UK

www.iLight.co.uk

High Tech Campus


HTC 48 Eindhoven 5656 AE







# Mounting & Installation

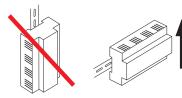



EG2-S must be mounted in a suitable enclosure to provide regulatory protection from electric shock hazard as well as protecting the iCANnet data network from tampering that could lead to reduced network security.

Ensure selected enclosure provides adequate cooling ventilation.


# Fixing to DIN rail

- 1. Fix top clips over DIN rail.
- 2. Pull down bottom clip using screwdriver.
- 3. Close module towards DIN rail.
- 4. Push up bottom clip to fix securely to DIN rail.

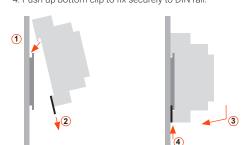

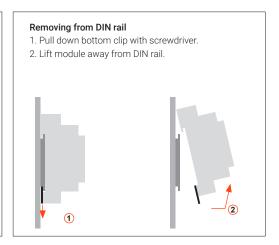

# Typical Schematic

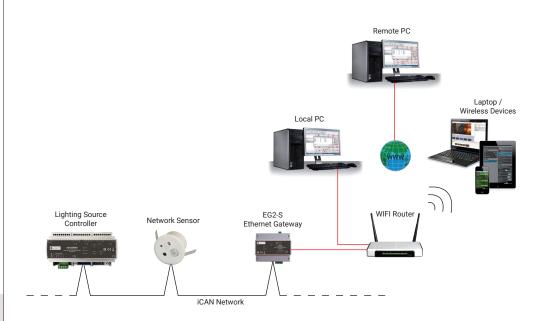

## **Technical Data**

### Electrical & Mechanical

Control: Via iLight network connection

Supply: +10 - 24V DC @ 750 mA Max (via external power supply) Terminal Size: iCANnet cable size: 5 x 1mm². Power cable size: 2 x 1mm²

Protection: Provided by installer

Recommended Cable: iCANnet Network Cable

Ambient temperature: 2°C - 50°C

Relative humidity: 5% - 95% max, non-condensing

IP rating: IP20

Installation: Installation must be carried out by a suitably qualified electrician

and installed in a suitable DINrail enclosure. Dimensions: 106mm (w) x 91mm (h) x 62mm (d)

Weight: 0.22kg

For programming EG2-S, the latest version of Device Editor software is required.

Please sign in / register at www.ilight.info for the latest versions.

#### Setup

#### Default Password: password

When connecting to an EG2-S (with firmware version 2.03P or later) the user must change the default password for a connection to an iLight system to be established.

Using Link manager in Device editor create a connection and set a new password. The new password must contain 8-64 characters, at least one lower-case character, at least one upper-case character, at least one numeric character and at least one special character.

# EG2-S

# **Ethernet Gateway**

# **Device LEDs and Buttons**

### Status LED

Green LED flashes - device OK

#### Data LED


Red LED flashes when messages sent on network.

### **Device Identification**

Press and release switch. Sending a message to identify the device on the network (red Data LED flashes)

# iCAN network wiring

Cable connections to the iCAN network are made to a removable 5-way connector block located on the EG2-S

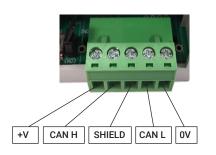

Function	iCANnet Cable Colour
0V	Black
CAN L	Blue
Shield	Silver
CAN H	White
+V	Red

Maximum segment distance: 500m (1640 ft)
Devices per segment: 100 (without bridge or repeater)
Consult iLight for information on alternative cable types.

IMPORTANT NOTE: Connecting a mains potential cable to the iCAN Network terminals is likley to damage the unit and other devices connected, and invalidate warranty.

# **Typical Connection Diagram**

#### Power Supply Jumper


Enables iLight Network BUS power when in the 'ON' position. Disables iLight Network BUS power when removed or in the 'OFF' position. Caution: This product requires 10-24V@750mA. When using the network to power this device ensure adequate power is available on the network.

**O**LIGHT

CH CE

DATA

STATUS

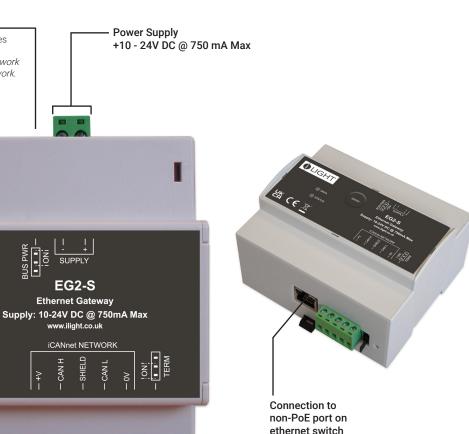

Device

Switch

Data LED


Status LED

Identification

# **Network termination**

EG2-S is supplied with termination disabled as standard. If it is connected as an end device on the iCAN network, the jumper will need to be moved to enable termination.

To enable termination, move the jumper downwards from the top two pins to the bottom two pins.

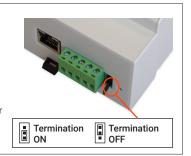

IDENT

Connection iLight Network to the iLight Termination Network